



HandHeld Dolphin 7 400 Client User Guide

Version 4.0

Revised 07-17-01

Copyright © 2001 by Wavelink Corporation All rights reserved.
Wavelink Corporation

11332 NE 122nd Way
Suite 300
Kirkland, Washington 98034
Telephone: (425) 823-0111
Web site: www.wavelink.com

E-mail: info@wavelink.com

No part of this publication may be reproduced or used in any form without permission in writing from Wavelink Corporation. This includes electronic or mechanical means, such as photocopying, recording, or information storage and retrieval systems. The material in this manual is subject to change without notice.

The software is provided strictly on an "as is" basis. All software, including firmware, furnished to the user is on a licensed basis. Wavelink Corporation grants to the user a non-transferable and non-exclusive license to use each software or firmware program delivered hereunder (licensed program). Except as noted below, such license may not be assigned, sublicensed, or otherwise transferred by the user without prior written consent of Wavelink Corporation. No right to copy a licensed program in whole or in part is granted, except as permitted under copyright law. The user shall not modify, merge, or incorporate any form or portion of a licensed program with other program material, create a derivative work from a licensed program, or use a licensed program in a network without written permission from Wavelink Corporation. The user agrees to maintain Wavelink Corporation's copyright notice on the licensed programs delivered hereunder, and to include the same on any authorized copies it makes, in whole or in part. The user agrees not to decompile, disassemble, decode, or reverse engineer any licensed program delivered to the user or any portion thereof.

Wavelink Corporation reserves the right to make changes to any software or product to improve reliability, function, or design.

Wavelink Corporation does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

HandHeld™ and HandHeld Dolphin™ are registered trademarks of HandHeld Products.

Table of Contents

Introduction	1
About This Document	1
Document Assumptions	1
Document Conventions	2
About Wavelink Studio Clients	2
Additional Information	3
 Installation	 4
Requirements	4
Getting Started	4
Installing the Wavelink Client	4
Starting the Wavelink Client	7
 Configuration	 8
Configuring HandHeld Dolphin 7400 Devices	8
Setting the ESS ID	8
Setting the Device IP Address	9
Setting the Subnet Mask	11
Setting the Default Router	12
Enabling DHCP	13
Configuring the Wavelink Client	15
Host Connections	16
Creating a Host Connection	16
Editing a Host Connection	18
Deleting a Host Connection	18
Advanced Client Configuration	19
Wavelink Client Settings	19
General Settings	20
Font Settings	23
Scroll Settings	25
Beeps Settings	27
Printer Settings	28
Scanner Settings	30
 Connecting to a Wavelink-enabled Network	 32
 AutoDiscovery and the Wavelink Client	 34
 Index	 37

Introduction

This user documentation is a complete guide to the functions and components of the Wavelink Client for the HandHeld Dolphin 7400 mobile device and presents:

- An introduction to the Wavelink Client environment and conceptual information about the Wavelink client/server structure
- Detailed installation instructions
- Information on how to configure the client for your network

This introduction describes the document assumptions and conventions, provides an overview of the Wavelink Client, and offers a list of additional reference materials.

About This Document

This user documentation provides assistance to anyone integrating the Wavelink Client into a Wavelink-enabled wireless network.

NOTE If you are interested in using your CE mobile devices for terminal emulation, see the Wavelink TelnetCE User Documentation.

Document Assumptions

This document makes the following assumptions:

- You have a general understanding of your wireless network layout.
- You have read and understood the instructions provided with your HandHeld Dolphin 7400 mobile devices.

Document Conventions

This document uses the following typographical conventions:

Courier New

Any time you interact with an option, such as a button, or type specific information into a field, such as a file path, that option appears in the `Courier New` text style. This text style is also used for any keyboard commands that you might need to press.

Examples:

Click `Next` to continue.

Press `CTRL+ALT+DELETE`.

Bold

Any time this document refers to an option, such as descriptions of elements in a dialog box, that option appears in the **Bold** text style.

Examples:

Click `Open` from the **File** menu.

The **Auto-Add** button automatically adds IP addresses to the IP address pool.

Italics

Any time this document refers to a section, that section appears in the *Italic* text style.

Example:

See *Configuration* on page 8 for more information.

About Wavelink Studio Clients

Wavelink Clients are part of the Wavelink Studio thin-client/server model. In this model, major application functions are carried out on the system hosting Wavelink servers. Wavelink Clients are responsible for communicating with the appropriate Wavelink server and displaying relevant application information to the mobile device.

A few of the benefits that Wavelink Clients offer are:

**Event-driven
Architecture**

Wavelink Clients' unique event-driven architecture minimizes wireless traffic by sending data packets only when prompted by user actions. This architecture ensures that communication between a device and a server is as efficient as possible.

**Control Over Device
Features**

Wavelink Clients integrate with the unique hardware requirements of HandHeld Dolphin 7400 mobile devices. Consequently, when you install the client, you retain full control over the device's functionality.

Client-side Menus

With Wavelink Clients, you can save commonly-used files and menus, such as barcode configuration files, directly on the device.

AutoDiscovery

Once you install a Wavelink Client, Wavelink's AutoDiscovery technology allows your mobile devices to automatically discover and access appropriate applications across a wireless network.

Additional Information

For additional information concerning Wavelink Studio Clients and how they integrate with the Wavelink product line, see the following documentation:

- [Wavelink Studio Server Documentation](#)
- [Wavelink Studio API Library Documentation](#)
- [Wavelink TelnetCE Documentation](#)

Installation

This section describes the hardware and software requirements of the Wavelink Client, and shows how to install the client on a mobile device.

Requirements

To install and run the Wavelink Client, you need the following components:

- A host computer with a connection to the network
- A specialized serial cable to connect the device to the host computer (available from HandHeld Products).
- A HandHeld Dolphin 7400 mobile device
- Microsoft ActiveSync 3.1 or higher

Getting Started

You must acquire the `wlc_h74_ce212_all_us_n.exe` to install the Wavelink Client on the mobile device. This file is available from the Wavelink Web site, www.wavelink.com.

You also must already have Microsoft ActiveSync installed on your host computer. Microsoft ActiveSync is available for download from the Microsoft Web site, www.microsoft.com.

Installing the Wavelink Client

This section describes the installation process for the Wavelink Client on a HandHeld Dolphin 7400 device. This installation uses Microsoft ActiveSync to download the client to the mobile device. The ActiveSync installation process described here shows you how to install the Wavelink Client to the application partition on the mobile device. This results in an install of the client that persists through device cold boots.

To install the Wavelink Client:

- 1 Download the `wlc_h74_ce212_all_us_n.exe` file from the Wavelink Web site to your host computer.

This file is a self-extracting zip file that contains all the necessary files for the Wavelink Client.

- 2 Extract the zip file to a directory of your choice.

Double-click the zip file to extract it.

- 3 Within the extracted files, locate the Setup.exe file.

- 4 Double-click the Setup.exe file.

A Welcome dialog box appears, introducing you to the Wavelink Client installation process.

- 5 Click **Next**.

The License Agreement appears. It is recommended that you read this agreement carefully.

- 6 Click **Yes**.

The User Information dialog box appears.

- 7 Type your name in the **Name** text box.

- 8 Type the name of your company in the **Company** text box.

- 9 Click **Next**.

The Choose Destination Location dialog box appears. By default, the Setup.exe file installs the Wavelink Client in the following directory:

```
C:\...\Microsoft ActiveSync\TelnetCE
```

To select a different location, click **Browse** and navigate to the desired directory.

- 10 Click **Next**.

The Setup Type dialog box appears.

- 11 Select the **Typical** option and click **Next**.

The Select Program Folder dialog box appears.

- 12 Select a program folder for the Wavelink Client and click **Next**.

The Setup.exe file installs the Wavelink Client. After the installation, it informs you that the files will be downloaded to the mobile device the next time it connects to your host computer. If the device is already connected through ActiveSync, the Wavelink Client immediately begins to download to the device.

13 Click **OK**.

The Setup Complete dialog box appears.

14 Click **Finish**.

15 Place the mobile device in its docking cradle.

A message box appears (Figure 1) asking whether you want to install the client to the default application install directory.

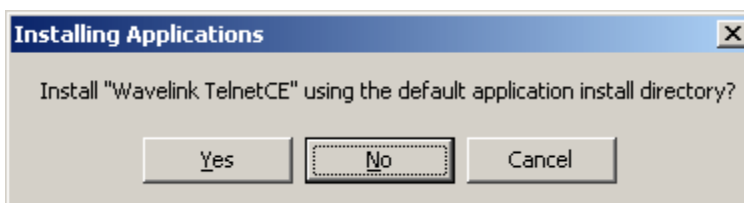


Figure 1. *The Installing Applications Dialog Box*

16 Click **No**.

NOTE If you click **Yes** in this dialog box, you can immediately install the Wavelink Client, but the client will not persist on the device after the next cold boot.

After you click **No**, the Select Destination Media dialog box appears, as shown in Figure 2.

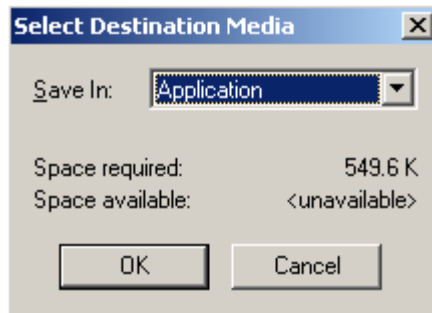


Figure 2. *The Select Destination Media Dialog Box*

17 Select `Application` from the **Save In** drop-down list.

18 Click `OK`.

Microsoft ActiveSync automatically begins to download the Wavelink Client to the device. After the download is complete, a dialog box appears, requesting that you check your mobile device to see if additional steps are necessary to install the Wavelink Client.

NOTE The HandHeld Dolphin 7400 device does not require any additional steps once Microsoft ActiveSync installs the Wavelink Client.

19 Click `OK` to complete the download process.

Starting the Wavelink Client

To start the Wavelink Client on the HandHeld Dolphin 7400 mobile device, tap `Start`, then `Programs`, and then select `TelnetCE`.

Configuration

The HandHeld Dolphin 7400 mobile device contains a variety of capabilities that you can configure to meet the needs of your organization. This section includes consolidated instructions on how to use these capabilities to fully integrate the device within your wireless network.

NOTE The following sections are not exhaustive instructions on the full capabilities of HandHeld Dolphin 7400 mobile devices. See your hardware documentation for more information on the full capabilities of these devices.

Configuring HandHeld Dolphin 7400 Devices

This section focuses on how to configure a HandHeld Dolphin 7400 mobile device to connect with a Wavelink-enabled network.

Setting the ESS ID

You must set the ESS ID of the HandHeld Dolphin 7400 device to match the corresponding ESS ID of one or more Access Points on your network. Only mobile devices that share the same ESS ID with an Access Point can communicate with your network.

To set the ESS ID:

- 1 From the mobile device, tap `Start`, then `Programs`, then `Cisco`, and select `Client Utility`.

The client utility dialog box appears.

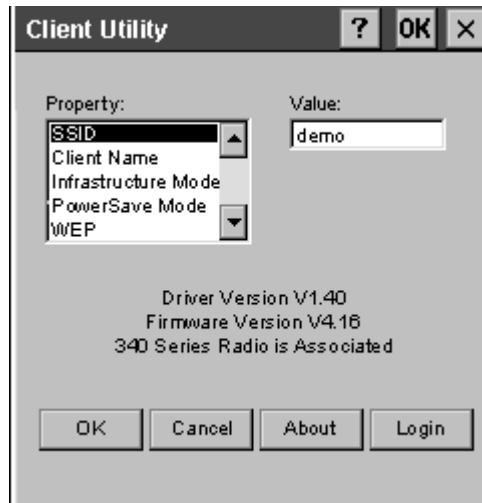


Figure 3. *The Client Utility Dialog Box*

- 2 Select **SSID** from the **Property** list.
- 3 Enter the ESS ID this mobile device will use in the **Value** text box.
- 4 Tap **OK**.

Setting the Device IP Address

You can manually set the IP address of the HandHeld Dolphin 7400 mobile. It is not recommended that you manually set the IP address if you use a DHCP server to assign IP addresses to network components.

To set the IP address:

- 1 From the mobile device, tap **Start**, then **Settings**, and select **Control Panel**.

The Control Panel dialog box appears.

- 2 Tap the **Network** icon twice.

A Network Configuration dialog box appears. This dialog box allows you to select the network adapter driver you want to configure.

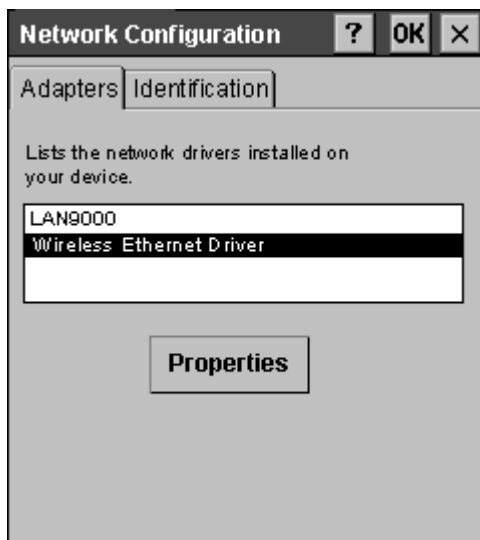


Figure 4. *The Network Configuration Dialog Box*

- 3** Select a wireless Ethernet driver from the **Adapters Installed** list and tap **Properties**.

NOTE The specific driver you select depends on the type of drivers already installed on your mobile device.

A dialog box appears that allows you to configure different options for the adapter driver. This dialog box contains two tabs: IP Address and Name Servers.

- 4** Tap the IP Address tab.

A selection of IP address options appears.



Figure 5. *The IP Address Tab*

- 5 Enable the **Specify an IP address** option.
- 6 Enter the IP address for the mobile device in the **IP address** text box.
- 7 Tap **OK**.

An Adapters dialog box appears, informing you that the new settings take effect when the adapter is next used.

- 8 Tap **OK**.
- 9 In the Network Connections dialog box, tap **OK**.

Setting the Subnet Mask

If you decide to manually set IP addresses for the HandHeld Dolphin 7400 mobile device, you can also set its subnet mask.

To set the Subnet Mask:

- 1 From the mobile device, tap **Start**, then **Settings**, and select **Control Panel**.

The Control Panel dialog box appears.

- 2 Tap the Network icon twice.

A Network Configuration dialog box appears. This dialog box allows you to select the network adapter driver you want to configure.

- 3 Select a wireless Ethernet driver from the **Adapters Installed** list and tap **Properties**.

NOTE The specific driver you select depends on the type of drivers already installed on your mobile device.

A dialog box appears that allows you to configure different options for the adapter driver. This dialog box contains two tabs: IP Address and Name Servers.

- 4 Tap the IP Address tab.

A selection of IP address options appears.

- 5 Make sure the **Specify an IP address** option is enabled.

- 6 Enter the subnet mask for the mobile device in the **Subnet Mask** text box.

- 7 Tap **OK**.

An Adapters dialog box appears, informing you that the new settings take effect when the adapter is next used.

- 8 Tap **OK**.

- 9 In the Network Connections dialog box, tap **OK**.

Setting the Default Router

If you decide to manually set IP addresses for the HandHeld Dolphin 7400 mobile device, you can also set its default router IP address (also known as the gateway IP address).

To set the default router:

- 1 From the mobile device, tap **Start**, then **Settings**, and select **Control Panel**.

The Control Panel dialog box appears.

- 2 Tap the Network icon twice.

A Network Configuration dialog box appears. This dialog box allows you to select the network adapter driver you want to configure.

- 3 Select a wireless Ethernet driver from the **Adapters Installed** list and tap **Properties**.

NOTE The specific driver you select depends on the type of drivers already installed on your mobile device.

A dialog box appears that allows you to configure different options for the adapter driver. This dialog box contains two tabs: IP Address and Name Servers.

- 4 Tap the IP Address tab.

A selection of IP address options appears.

- 5 Make sure the **Specify an IP address** option is enabled.

- 6 Enter the default router for the mobile device in the **Default Gateway** text box.

- 7 Tap **OK**.

An Adapters dialog box appears, informing you that the new settings take effect when the adapter is next used.

- 8 Tap **OK**.

- 9 In the Network Connections dialog box, tap **OK**.

Enabling DHCP

If you use a DHCP server to assign IP addresses to network components, you can configure the HandHeld Dolphin 7400 mobile device to receive its IP address from your DHCP server.

To enable DHCP:

- 1 From the mobile device, tap **Start**, then **Settings**, and select **Control Panel**.

The Control Panel dialog box appears.

- 2 Tap the Network icon twice.

A Network Configuration dialog box appears. This dialog box allows you to select the network adapter driver you want to configure.

- 3 Select a wireless Ethernet driver from the **Adapters Installed** list and tap **Properties**.


NOTE The specific driver you select depends on the type of drivers already installed on your mobile device.

A dialog box appears that allows you to configure different options for the adapter driver. This dialog box contains two tabs: IP Address and Name Servers.

- 4 Tap the IP Address tab.

A selection of IP address options appears.

- 5 Enable the **Obtain an IP address via DHCP** option.

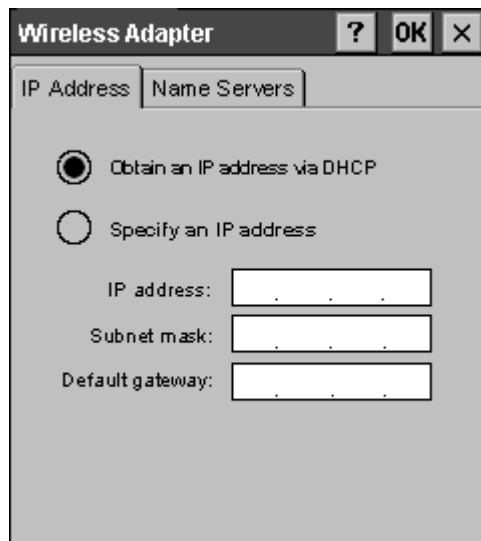

The screenshot shows a dialog box titled "Wireless Adapter" with a question mark icon, an "OK" button, and a close "X" button. Below the title bar are two tabs: "IP Address" (which is selected) and "Name Servers". The "IP Address" tab contains two radio button options: "Obtain an IP address via DHCP" (which is selected) and "Specify an IP address". Below these options are three text input fields: "IP address:", "Subnet mask:", and "Default gateway:". Each field has a placeholder showing four dots (". . . .").

Figure 6. *The IP Address Tab*

- 6 Tap the Name Servers tab.

A selection of DHCP options appears.

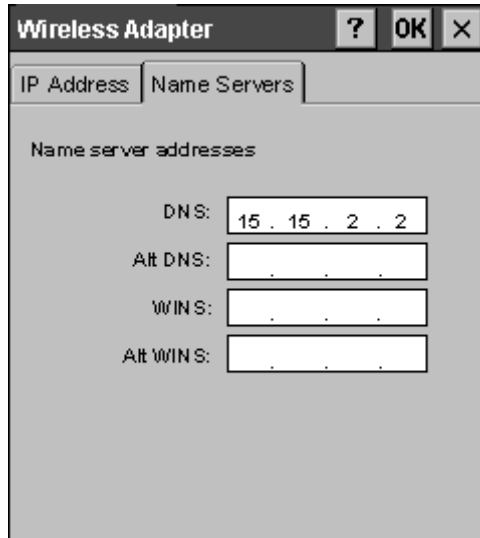
The image shows a screenshot of a 'Wireless Adapter' configuration window. At the top, there is a title bar with a question mark icon, an 'OK' button, and a close 'X' button. Below the title bar, there are two tabs: 'IP Address' and 'Name Servers', with the 'Name Servers' tab currently selected. The main area of the window is titled 'Name server addresses'. It contains four rows of input fields: 'DNS:' with the value '15 . 15 . 2 . 2', 'Alt DNS:', 'WINS:', and 'Alt WINS:'. Each of the last three rows has an empty input field with four dots indicating a four-digit IP address format.

Figure 7. *The Name Servers Tab*

- 7 Enter the IP address of your DHCP server in the **DNS** text box.

- 8 Tap **OK**.

An Adapters dialog box appears, informing you that the new settings take effect when the adapter is next used.

- 9 Tap **OK**.

- 10 In the Network Connections dialog box, tap **OK**.

Configuring the Wavelink Client

This section describes how to configure the Wavelink Client for the HandHeld Dolphin 7400 mobile device.

NOTE In the following sections, the term “host” is used to refer to the server components of Wavelink Studio.

Host Connections

Before you can connect the HandHeld Dolphin 7400 mobile device to your network, you must create a host connection. This connection provides the IP address and port number of the host system to which you want the device to connect.

Creating a Host Connection

You can create as many host connections as your network demands. Each connection can connect to a specific application on your network, allowing you to have multiple applications available to your mobile device users.

To create a host connection:

- 1 Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2 Select `Connect` from the **Term** menu.

The Connecting to Host dialog box appears.

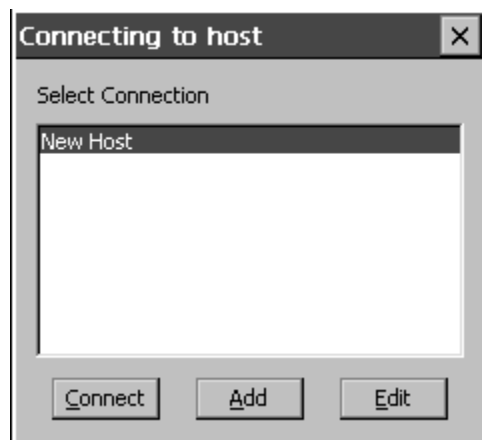


Figure 8. *The Connecting to Host Dialog Box*

NOTE If the **Select Connection** list is empty, a message box appears informing you that you must create a host entry prior to connecting. Click **OK** in this message box to return to the Connecting to Host dialog box.

3 Tap **Add**.

The Edit Connection dialog box appears.

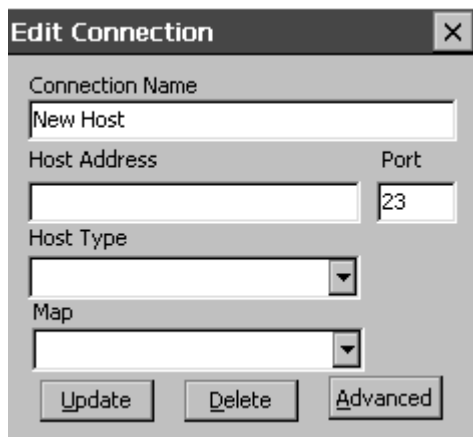


Figure 9. *The Edit Connection Dialog Box*

4 In the **Connection Name** text box, type the name for the host connection.

This value appears in the **Select Connection** field after you create the host connection.

5 In the **Host Address** text box, type the address of the host to which you want the device to connect.

This value can be a name that resolves into an IP address or a numeric IP address—for example, 128.255.1.64.

6 In the **Port** text box, type the port number to which you want the device to connect.

7 Select **Wavelink** from the **Host Type** list.

8 Tap **Update** to confirm the settings.

The Wavelink Client creates the new connection. The name of the connection appears in the **Select Connection** field of the Connecting to Host dialog box.

If you want to immediately connect to a host, select the desired host and click **Connect**.

Editing a Host Connection

If the parameters defining a host connection change, you can edit the host connection directly on the mobile device to ensure your users retain access to the applications they need.

To edit a configured host connection:

- 1 Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2 Select **Connect** from the **Term** menu.

The Connecting to Host dialog box appears.

- 3 Select the host connection you want to edit in the **Select Connection** field.

- 4 Tap **Edit**.

- 5 Edit the host connection values.

- 6 Tap **Update** to update the host connection.

Deleting a Host Connection

If a host connection is no longer required for a user, you can delete the host connection from the mobile device.

To delete a host connection:

- 1 Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2 Select **Connect** from the **Term** menu.

The Connecting to Host dialog box appears.

- 3 Select the host connection you want to delete in the **Select Connection** field.

- 4 Tap `Delete`.

Advanced Client Configuration

The Wavelink Client for the HandHeld Dolphin 7400 mobile device allows you to set advanced configuration settings. These settings include how fonts, sounds, and other options are used on the mobile device.

Wavelink Client Settings

The Wavelink Client settings control the number of rows and columns displayed on the device.

To access the Wavelink Client settings:

- 1 Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2 Select `Connect` from the **Term** menu.

The Connecting to Host dialog box appears.

- 3 Select the host connection you want to edit in the **Select Connection** field.

- 4 Tap `Edit`.

The Edit Connection dialog box appears.

- 5 Tap `Advanced`.

The Settings dialog box appears.

- 6 Tap the Wavelink tab.

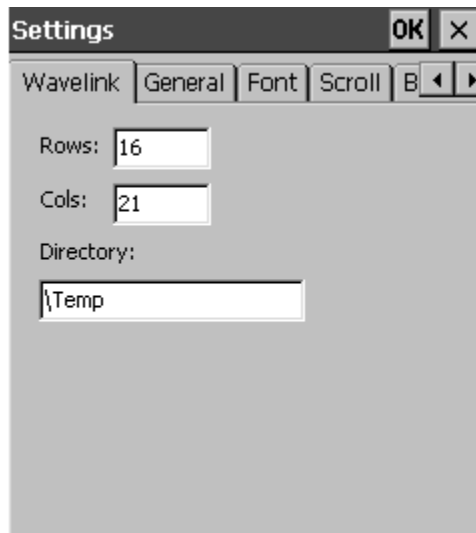


Figure 10. *The Wavelink Settings Tab*

You can configure the following options in the Wavelink tab:

- | | |
|----------------|--|
| Rows | Type the number of rows on the mobile device display. The default value is 16. |
| Columns | Type the number of columns on the mobile device display. The default value is 21. |
| Dir | Type the complete path where Wavelink temporary files will be stored. The default is \\Temp. |

General Settings

The General tab contains settings that allow you to configure the view mode. The current view mode in Wavelink Client determines how the screen appears during a host session.

To access the General tab:

- 1 Launch the Wavelink Client.

The Wavelink startup screen appears.
- 2 Select `Connect` from the **Term** menu.

The Connecting to Host dialog box appears.

3 Select the host connection you want to edit in the **Select Connection** field.

4 Tap **Edit**.

The Edit Connection dialog box appears.

5 Tap **Advanced**.

The Settings dialog box appears.

6 Tap the General tab.

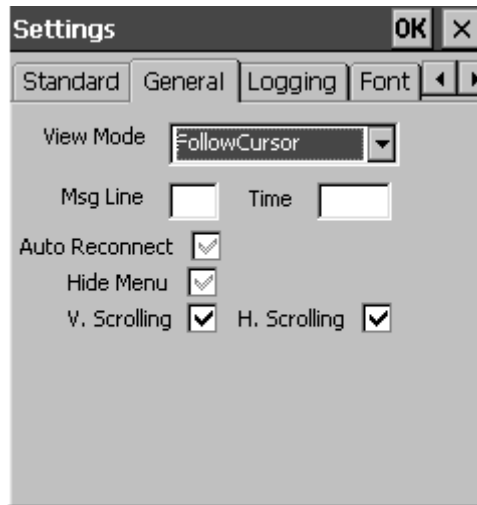


Figure 11. *The General Tab*

You can configure the following options on this screen.

View Mode

Select the desired view mode. The following view modes are available.

Select the **Fixed** option if you want the display to remain in a fixed location on the screen.

Select the **Follow Cursor** option if you want the display to “attach” to the cursor on the screen and follow it around.

Select the **Watermark** option if you want the cursor remains fixed in the center of the screen. The screen moves in the background.

NOTE To adjust specific parameters for each view mode, see *Connecting to a Wavelink-enabled Network* on page 32 for more information.

Msg Line

Specifies the line from the screen that the Wavelink Client reads to display as the message line on the device. The row number must be from 0-24. The default row is 0. The client displays the message line each time its contents change. When the contents of the message line are not visible, the line appears in reverse video at the top of the display.

Time

Type the time, in seconds, that the client displays the message line.

Auto Reconnect

Select this check box if you want the client to automatically attempt to reconnect to a host after the host system closes a connection.

Hide Menu

Select this check box if you want to hide the menu bar during a session. Choosing this option is recommended should you want more screen space available for the application.

V. Scrolling

Select this check box to allow your users to navigate the application with the vertical scrollbar.

H. Scrolling

Select this check box to allow your users to navigate the application with the horizontal scrollbar.

Font Settings

The Font tab contains options that allow you to control how fonts appear on the mobile device.

To access the Font tab:

- 1 Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2 Select `Connect` from the **Term** menu.

The Connecting to Host dialog box appears.

- 3 Select the host connection you want to edit in the **Select Connection** field.

- 4 Tap `Edit`.

The Edit Connection dialog box appears.

- 5 Tap `Advanced`.

The Settings dialog box appears.

- 6 Tap the Font tab.

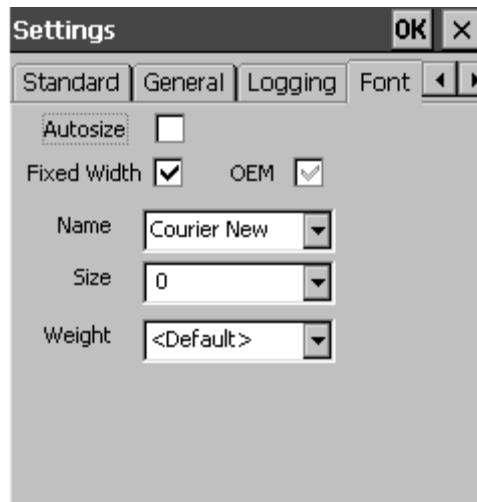


Figure 12. *The Font Tab*

You can configure the following options on this screen.

- | | |
|--------------------|---|
| Autosize | When you enable the Autosize option, the Wavelink Client automatically selects the best available font size to fit the screen. You can restore the default value to this field by selecting a grayed-out check mark. |
| Fixed Width | Select the Fixed Width check box to restrict the types of fonts available for display to fixed-width fonts. |
| OEM | Select the OEM check box to restrict the types of fonts available for display to OEM fonts. |
| Name | To select a specific font, select one from the Name list. |
| Size | To select a specific font size, select one from the Size list. |
| Weight | To choose a specific font weight, select one from the Weight list. |

Scroll Settings

The Wavelink Client includes several scroll modes that determine how screens appear on the device.

To access the Scroll tab

- 1 Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2 Select `Connect` from the **Term** menu.

The Connecting to Host dialog box appears.

- 3 Select the host connection you want to edit in the **Select Connection** field.

- 4 Tap `Edit`.

The Edit Connection dialog box appears.

- 5 Tap `Advanced`.

The Settings dialog box appears.

- 6 Tap the Scroll tab.

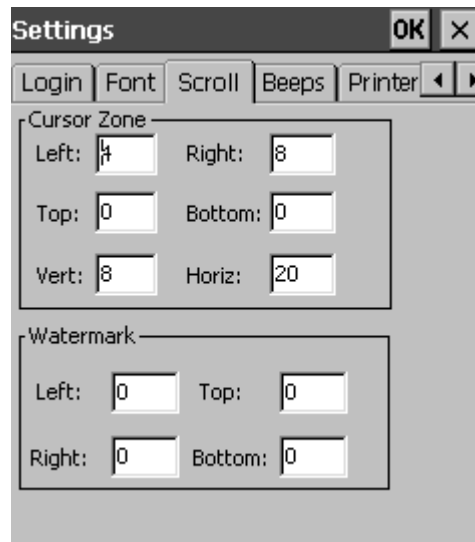


Figure 13. *The Scroll Tab*

The Cursor Zone fields contain configuration options for Follow Cursor mode. When you set Follow Cursor mode as the current view mode, the display conforms to the cursor location, following it around the screen.

Left, Right

Determine the left and right border of the cursor zone inside the screen. This distance, measured in characters from the edge of the screen, must be a value from 1-10. When the cursor moves outside the cursor zone border, the Wavelink Client re-adjusts the display, centering the cursor on the screen. The default value is 4 for the left border and 1 for the right border.

Top, Bottom

Determine the top and bottom borders of the cursor zone inside the screen. This distance, measured in rows from the edge of the screen, must be a value from 1-10. When the cursor moves outside the cursor zone border, the Wavelink Client re-adjusts the display, centering the cursor on the screen. The default value is 0 for the top and bottom border.

Vertical, Horizontal

Determine the number of rows or columns the screen moves when the cursor crosses a vertical or horizontal edge of the screen. This value can be from 1-24 for the **Vert.** field and 1-80 for the **Horiz.** field.

When you set the current view mode to Watermark, the cursor attaches to a small portion of the screen, and the rest of the screen appears to move in the background. The Watermark fields determine the position for the cursor on the screen.

Left, Right, Top, and Bottom

These fields determine the four borders of the watermark zone. This distance is measured in characters.

NOTE You can switch between view modes during host sessions by selecting Mode, followed by [view mode] from the **View** menu on the Wavelink Client startup screen.

NOTE When Fixed mode is set as the current view mode, the Wavelink Client positions the display over the upper left corner of the screen. If you switch to Fixed mode during a host session, the display locks into its current position.

Beeps Settings

You can configure audio messages issued by a host through the Beeps parameters.

To access the Beeps tab:

- 1** Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2** Select `Connect` from the **Term** menu.

The Connecting to Host dialog box appears.

- 3** Select the host connection you want to edit in the **Select Connection** field.

- 4** Tap `Edit`.

The Edit Connection dialog box appears.

- 5** Tap `Advanced`.

The Settings dialog box appears.

- 6** Tap the Beeps tab.

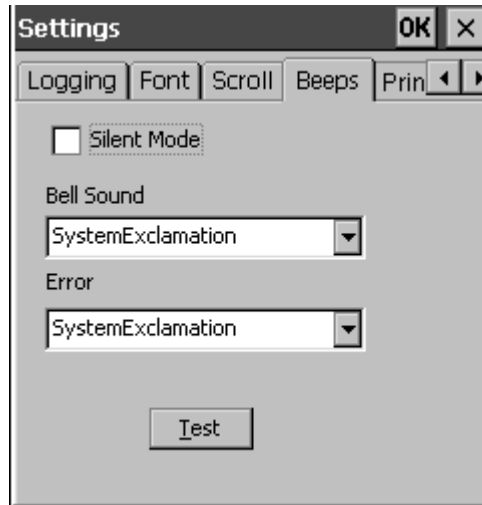


Figure 14. *The Beeps Tab*

To configure the mobile device to operate without sound, select the **Silent Mode** option.

To configure sounds, select the desired sound either the **Bell Sound** or **Error** list. The possible values are either Windows sound names or file names.

Tap **Test** to try out new settings before you save them to the device.

Printer Settings

The Printer tab controls options related to the HandHeld Dolphin 7400 printing capabilities.

To access the Printer tab:

- 1** Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2** Select **Connect** from the **Term** menu.

The Connecting to Host dialog box appears.

- 3** Select the host connection you want to edit in the **Select Connection** field.
- 4** Tap **Edit**.

The Edit Connection dialog box appears.

5 Tap **Advanced**.

The Settings dialog box appears.

6 Tap the **Printer** tab.

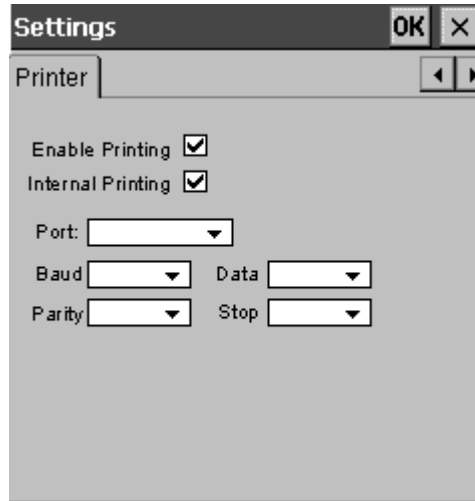


Figure 15. *The Printer Tab*

You can configure the following options on this screen:

Enable Printing	Enable this checkbox to allow the mobile device to print.
Internal Printing	Enable this checkbox to allow the mobile device to print to a file on the device.
Port	Select a port the mobile device uses to connect to a printer.
Baud	Select a baud rate the mobile device uses to send print data.
Parity	Select a parity the mobile device uses to send print data.

Data	Select the number of data bits the mobile device uses to send print data.
Stop	Select the number of stop bits the mobile device uses to send print data.

Scanner Settings

The Scanner tab controls options related to the scanner on the HandHeld Dolphin 7400 mobile device.

To access the Scanner tab:

- 1** Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2** Select `Connect` from the **Term** menu.

The Connecting to Host dialog box appears.

- 3** Select the host connection you want to edit in the **Select Connection** field.

- 4** Tap `Edit`.

The Edit Connection dialog box appears.

- 5** Tap `Advanced`.

The Settings dialog box appears.

- 6** Tap the Scanner tab.

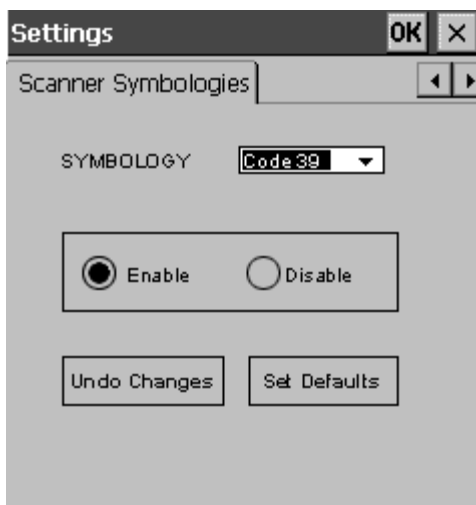


Figure 16. *The Scanner Dialog Box*

You can configure the following options on this screen:

Symbology	Determines the scanner symbology the device uses.
Enable	Enables the scanner.
Disable	Disables the scanner.
Undo Changes	Resets the scanner to its previous settings.
Set Defaults	Sets the current settings as the default values.

Connecting to a Wavelink-enabled Network

After you configure the Wavelink Client on a mobile device, you can use the device to connect to a Wavelink-enabled network.

To connect to a Wavelink-enabled network:

To connect to a configured host, follow these steps.

- 1 From the mobile device, tap **Start**, then **Programs**, and select **TelnetCE**.

The Wavelink startup screen appears.

- 2 Select **Connect** from the **Term** menu.

The Connecting to Host dialog box appears.

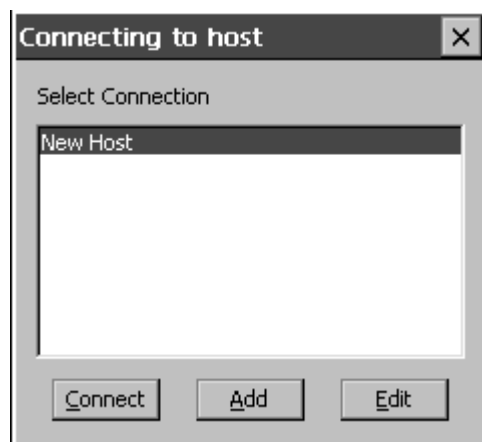


Figure 16-1. *The Connecting to Host Dialog Box*

- 3 Select the desired host from the **Select Host** list.
- 4 Tap **Connect**.

NOTE If the **Select Host** field is empty, you must add a host before making a connection.

You can disconnect from a host by selecting `Disconnect` from the **Term** menu. This option is grayed out if there are no active host sessions.

AutoDiscovery and the Wavelink Client

The Wavelink Client for HandHeld Dolphin 7400 mobile devices is fully compatible with Wavelink Studio 4.0's AutoDiscovery technology. This technology allows a mobile device user to connect to applications without having to manually enter an IP address and port number of a server on the network.

To activate AutoDiscovery on the Wavelink Client:

- 1 Launch the Wavelink Client.

The Wavelink startup screen appears.

- 2 Select `Connect` from the **Term** menu.

The Connecting to Host dialog box appears.

- 3 Select a host connection from the **Select Host** list.

- 4 Tap `Edit`.

The Edit Connection dialog box appears.

- 5 Enter an asterisk (*) in the **Host Address** text box.

- 6 Erase any data in the **Port** text box.

- 7 Tap `Update`.

To connect to a Wavelink-enabled network using AutoDiscovery:

- 1 Activate AutoDiscovery on the Wavelink Client.

- 2 Select `Connect` from the **Term** menu.

The Connecting to Host dialog box appears.

- 3 Select a host connection from the **Select Host** list.

This host connection must be configured for AutoDiscovery.

- 4 Tap `Connect`.

The Wavelink Client automatically connects to the network and displays a list of available applications that do not require a password.

5 If you want to access applications that require a password, tap `Login`.

A new dialog box appears, asking you to enter a username and password.

6 Enter a correct username and password

7 Tap `OK`.

The Wavelink Client updates the list of available applications to include those applications that match the authorization level of your password.

Index

A

- advanced client configuration 19
 - beeps settings 27
 - font settings 23
 - general settings 20
 - printer settings 28
 - scanner settings 30
 - scroll settings 25
 - Wavelink settings 19
- audio messages 27
- AutoDiscovery 34

B

- beeps settings 27

C

- configuring 8
 - default router 12
 - device IP address 9
 - DHCP 13
 - ESS ID 8
 - subnet mask 11
- connecting to network 32

D

- default router 12
 - setting 12
- DHCP 13
 - setting 13

E

- ESS ID 8
 - setting 8

F

- fixed mode 27
- follow cursor mode 26
- font settings 23

G

- gateway IP address 12
- general settings 20

H

- host connections 16
 - creating 16
 - deleting 18
 - editing 18

I

- installing
 - getting started 4
 - requirements 4
- IP address 17
 - setting for mobile device 9

P

- printer settings 28

S

- scanner settings 30
- scroll settings 25
- subnet mask 11
 - setting 11

V

- view mode 20

W

- Wavelink Client
 - AutoDiscovery 34
 - host connections 16
 - starting 7
- Wavelink Client settings 19
- Wavelink Studio
 - overview 2

